



### CREATE A SOLID, LUXURY CAR FEEL

- Turn Down Road Noise
- Stop Resonance and Vibrations
- Reduce Buzzes and Rattles

### GET INCREDIBLE SOUND

- Hear More Music
- Get More Bass
- Stop Speaker Distortion

## FOR USE THROUGHOUT YOUR VEHICLE INTERIOR



Trunk



Doors



Floor

#### **SPEAKER KIT 1.38 sq.ft.**

2 shts 10" x 10" (.06 sq. meters) ea.

**Part No. 10415**

#### **DOOR KIT 12 sq.ft.**

4 shts 12" x 36" (1.1 sq. meters) ea.

**Part No. 10435**

#### **TRUNK KIT 20 sq.ft.**

5 shts 18" x 32" (1.85 sq. meters) ea.

**Part No. 19405**

#### **HEX PAK 4 sq.ft.**

1 sht 18" x 32" (.37 sq. meters)

**Part No. 10425**

#### **BULK PAK 36 sq.ft.**

9 shts 18" x 32" (3.3 sq. meters) ea.

**Part No. 10455**

#### **MEGA PAK 72 sq.ft.**

9 shts 24" x 48" (6.6 sq. meters) ea.


**Part No. 10465**



### The First Step To a Great Car

Dynamat Xtreme is the highest efficiency sound deadening material available and the most effective product for stopping noise and vibration. Xtreme should be used on any and all interior sheet metal or fiberglass body panels.

The aluminum constraining layer is very moldable and conforms easily to all interior surfaces. The patented extra sticky butyl layer is formulated with VECTOR™ chemistry for the most amazing energy conversion capabilities ever. Use it on your doors, floor, roof, hood and trunk for a quiet, cool and incredibly solid ride.

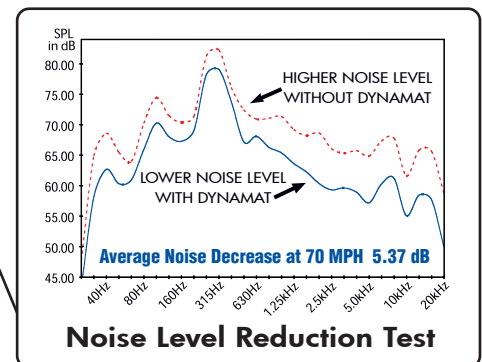

DO THIS **1<sup>st</sup>**

# MAKE YOUR CAR COOL AND QUIET

## APPLY DYNAMAT XTREME

to any accessible interior sheet metal or fiberglass

IN ORDER OF IMPORTANCE



DOORS



FLOOR



TRUNK



ROOF

DO THIS **2<sup>nd</sup>**

## ADD EVEN MORE COOL

### APPLY DYNALINER

over the top of the Dynamat Xtreme

IN ORDER OF IMPORTANCE



DOORS



FLOOR



TRUNK



ROOF

DO THIS **3<sup>rd</sup>**

## ADD EVEN MORE QUIET

### HOODLINER

### DYNAPAD

Apply **The Hoodliner** to the underside of your hood to absorb engine noise and control heat. If a black finish is desired, **Dynaliner** can be used. Both products are heat resistant.

Replace **Dynaliner** with **DynaPad** on floor, firewall and trunk floor when a heavy duty barrier is needed. Common applications include: high performance exhaust noise & car audio installations.

